

Plain Mount

Small Flat Cut Metal Letters / Logos

Flat and Smooth Surface

Installation Guide

Small Metal letters with NO hardware.

Tools Required: Spacing Guide, level, masking tape, tape measure, cleaning cloth, adhesive, quality VHB tape.




Videos



1. CLEAN Mounting Surface

Clean and prepare mounting surface before starting your install.

Tip: Surface should be flat, clean and free of excess dust or moisture.

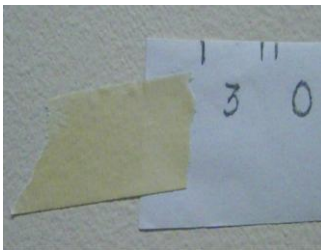

2. POSITION and Secure Guide

A Spacing or Stencil Guide are recommended to properly install flat letters. Layout, level and securely tape your guide flat to mounting surface. Check spelling, spacing and kerning of letters on guide.



3. APPLY Adhesive / Tape to Letters

Small plain letters can be installed with VHB Tape, adhesive or a combination of the two. Be sure to use an adhesive that will bond to the metal and smooth flat mounting surface. Trim any excess tape - if wider than the letter stroke. Add small dots of adhesive (if stroke allows) using a Q-tip or small paint brush.



4. TAPE Letters to Secure

Using long strips of tape, securely tape letters to wall using guide. Stand back and perform a visual check to make sure letters are straight. Lift tape and reposition letters as needed to set straight.

Perform a final check, from a distance, to insure proper spelling & spacing.



5. PRESS Letters to Set

After letters are aligned properly on wall, apply pressure to face of each letter.

6. REMOVE Masking Tape & Clean Letters

After adhesive sets (letters do not move), remove masking tape from letters. Clean off letter faces with a mild dish soap and water - wipe in same direction as letter grain to help prevent scratching letter faces.