

Pad Mount Acrylic Letters / Logos Flat Mounting Surface

Install Instructions

Plastic pads, or pads and studs on acrylic letters.

Tools Required: Spacing Guide, level, masking tape, tape measure, cleaning cloth, adhesive.




Video



1. CLEAN Mounting Surface

Clean and prepare mounting surface before starting your install.

Tip: Surface should be clean and free of excess dust or moisture.

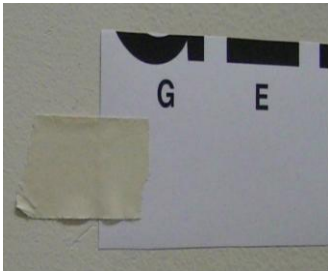

2. POSITION and Secure Guide

A Spacing Guide or Pounce Pattern are recommended to properly install flat letters. Layout, level and securely tape your guide flat to mounting surface. Check spelling, spacing and kerning of letters on guide.



3. APPLY Adhesive to Pads


Using a quality adhesive, generously apply to the pads of your #1 letter. Install one letter at a time.



4. TAPE Letters to Secure

Using long strips of tape, securely tape letters to wall using guide. Stand back and perform a visual check to make sure letters are straight. Lift tape and reposition letters as needed to set straight.

Perform a final check, from a distance, to insure proper spelling & spacing.

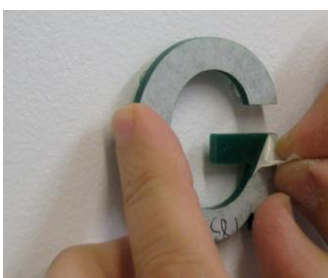

5. PRESS Letters to Set

After letters are aligned properly on wall, apply pressure to face of each letter.

6. REMOVE Masking Tape & Face Masking.

After adhesive sets (letters do not move), remove masking tape from letters. Finally, remove protective letter masking from letter faces. Clean off letter faces as needed.